
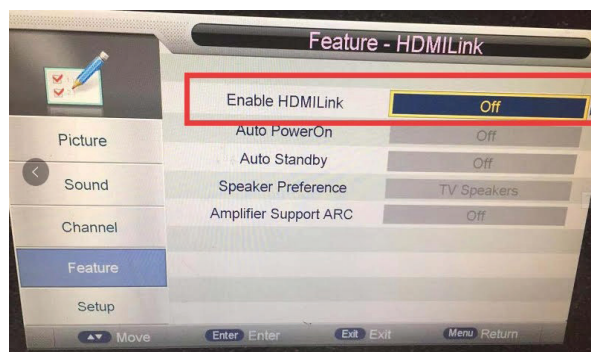


All Aquavision televisions incorporate a CEC control through their HDMI input.



CEC Protocol for Genesis and Nexus Screens

1. Press the MENU button.
2. Using the DOWN arrow, scroll to 'Feature'.
3. Once you have selected 'Feature' press the RIGHT arrow.
4. Using the DOWN arrow scroll down to Enable HDMI Link (this will be on the second page) and press the RIGHT arrow to change it to ON.
5. Press EXIT to escape from this menu.

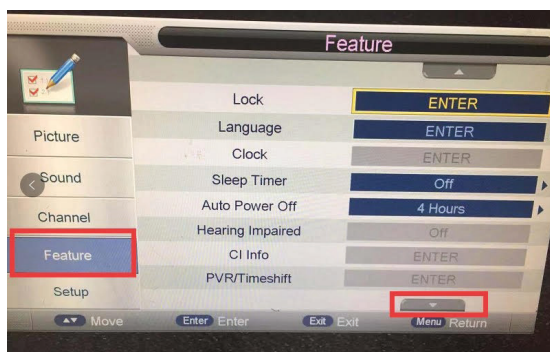

CEC Protocol for Pinnacle Screens

1. Press the MENU button.
2. Using the DOWN arrow, scroll to 'Set Up' which shows as a standard settings-style 'cog' image.
3. Once you have selected 'Set Up' press the RIGHT arrow.
4. Using the DOWN arrow scroll down to HDMI CEC and press ENTER
5. Make sure CEC is connected and press the RIGHT arrow to slide the icon from 'OFF' to 'ON'.
5. Press EXIT to escape from this menu.

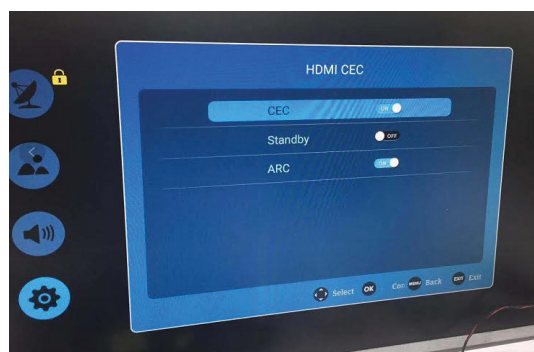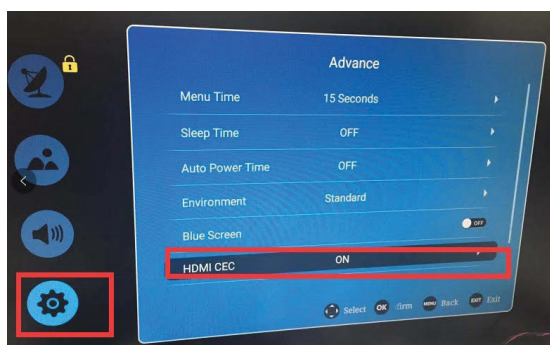

CEC User Control Codes

Operation ID	User Operation	Operation ID	User Operation	Operation ID	User Operation
0x00	Select	0x33	Sound Select	0x58 – 0x5F	Reserved
0x01	Up	0x34	Input Select	0x60	Play Function
0x02	Down	0x35	Display Information	0x61	Pause-Play Function
0x03	Left	0x36	Help	0x62	Record Function
0x04	Right	0x37	Page Up	0x63	Pause-Record Function
0x05	Right-Up	0x38	Page Down	0x64	Stop Function
0x06	Right-Down	0x39 – 0x3F	Reserved	0x65	Mute Function
0x07	Left-Up	0x40	Power	0x66	Restore Volume Function
0x08	Left-Down	0x41	Volume Up	0x67	Tune Function
0x09	Root Menu	0x42	Volume Down	0x68	Select Media Function
0x0A	Setup Menu	0x43	Mute	0x69	Select A/V Input Function
0x0B	Contents Menu	0x44	Play	0x6A	Select Audio Input
0x0C	Favourite Menu	0x45	Stop	0x6B	Power Toggle Function
0x0D	Exit	0x46	Pause	0x6C	Power Off Function
0x0E – 0x0F	Reserved	0x47	Record	0x6D	Power On Function
0x10	Media Top Menu	0x48	Rewind	0x6E – 0x70	Reserved
0x11	Media Context sensitive menu	0x49	Fast Forward	0x71	F1 (Blue)
0x12 – 0x1C	Reserved	0x4A	Eject	0x72	F2 (Red)
0x1D	Number Entry Mode	0x4B	Forward	0x73	F3 (Green)
0x1E	Number 11	0x4C	Backward	0x74	F4 (Yellow)
0x1F	Number 12	0x4D	Stop-Record	0x75	F5
0x20	Number 0 or Number 10	0x4E	Pause-Record	0x76	Data
0x21 – 0x29	Numbers 1-9	0x4F	Reserved		
0x2A	Dot	0x50	Angle		
0x2B	Enter	0x51	Sub picture		
0x2C	Clear	0x52	Video on Demand		
0x2D – 0x2E	Reserved	0x53	Electronic Program		
0x2F	Next Favourite	0x54	Timer Programming		
0x30	Channel Up	0x55	Initial Configuration		
0x31	Channel Down	0x56	Select Broadcast Type		
0x32	Previous Channel	0x57	Select Sound Presentation		



HEAD OFFICE AND FACTORY
 Aquavision
 Grosvenor Business Park, Horsfield Way,
 Stockport, Cheshire, SK6 2SU
 United Kingdom

 www.aquavision.tv
 sales@aquavision.tv
 +44 [0]161 711 1900

