

Exiting from 'Burn In' Mode

To exit Burn-In Mode, please follow these steps:

1. Get a blank memory stick.
2. Create a folder called FACTEST.CTV
3. Load the memory stick into the TV.
4. It may auto detect and start running a program and return itself to normal.
5. If it doesn't auto detect, please do a power cycle. It will then auto detect.
6. You will then need to reinstall the latest software onto the television.



HEAD OFFICE AND FACTORY
Aquavision
Grosvenor Business Park, Horsfield Way,
Stockport, Cheshire, SK6 2SU
United Kingdom

 www.aquavision.tv

 sales@aquavision.tv

 +44 [0]161 711 1900

