

Transmitter Boxes & Accessories

HDBaseT transmitter (Part Code: AVFCT-TX)

Simply connect to your source via HDMI and IR and then connect to your ConnectTV via a Cat5E or greater cable. Power supply provided



AVFCA-TX

HDBaseT transmitter with POH (Part Code: AVFCA-TX)

Simply connect to your source via HDMI and IR and then connect to your Aquavision ConnectTV-Active television via a Cat5E or greater cable. This will enable you to provide power and signal to the television via

Indicator Lights

Green = Power
Yellow = Link (Flashing = Low power mode, far end is asleep)
Blue = Data Received from Source device (Flashing = Data fault)


IR connector details

Connector Details	Tip	Ring	Sleeve
Connect boxes	VCC (5V 100Ohm)	IR V out (3.7V 8.1KOhm)	Ground
Aquavision TV - Sky	IR V out (3.7V 8.1KOhm)	VCC (5V 100Ohm)	Ground
Aquavision TV – IR Pass through	VCC (5V 100Ohm)	IR V out (3.7V 8.1KOhm)	Ground

ACCESSORIES

AVFCA-RACK

A bespoke 19" 1U rack tray for upto 3 of our transmitter modules. Supplied complete with rack fixings.

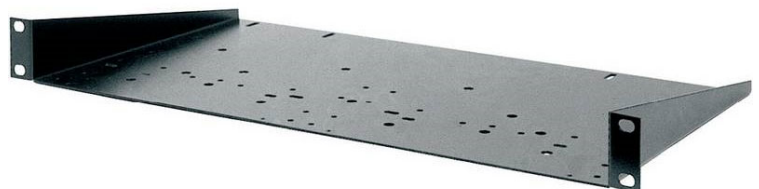

HEAD OFFICE AND FACTORY
Aquavision
Unit 2 Grosvenor Business Park
Horsfield Way, Stockport
Cheshire, SK6 2SU
United Kingdom
+44 [0]161 711 1900

AMERICAN OFFICE
Aquavision, Inc.
#197
5 Southside Drive, Suite 11
Clifton Park, NY 12065
America
+1 800 524 1804



sales@aquavision.tv
sales@aquavision.us

www.aquavision.tv
www.aquavision.us