

Universal Waterproof Remote Control Set Up Instructions


Product Code - AVWURC5E

Your Aquavision has been supplied as standard with a full featured, waterproof, universal, remote control with learning facility.

Please note that this comes preset to work with all current models of Aquavision, so you don't need to change anything for normal operation

To pair your new remote control with a previous model Aquavision television simply follow the steps below and use the reference table to determine your necessary code.

1. Press and hold one of the 'TV/SAT/DVD/AUDIO' buttons and the 'POWER' button together for 3 seconds.
2. The red light on the remote will light up. Release the buttons.
3. Point the remote control at the television or similar appliance to be controlled, and type in the required code from the quick look up table below.
4. The red light will turn off and the remote will be set automatically.
5. Your remote control will now be paired.
6. For further codes, please visit aquavision.tv

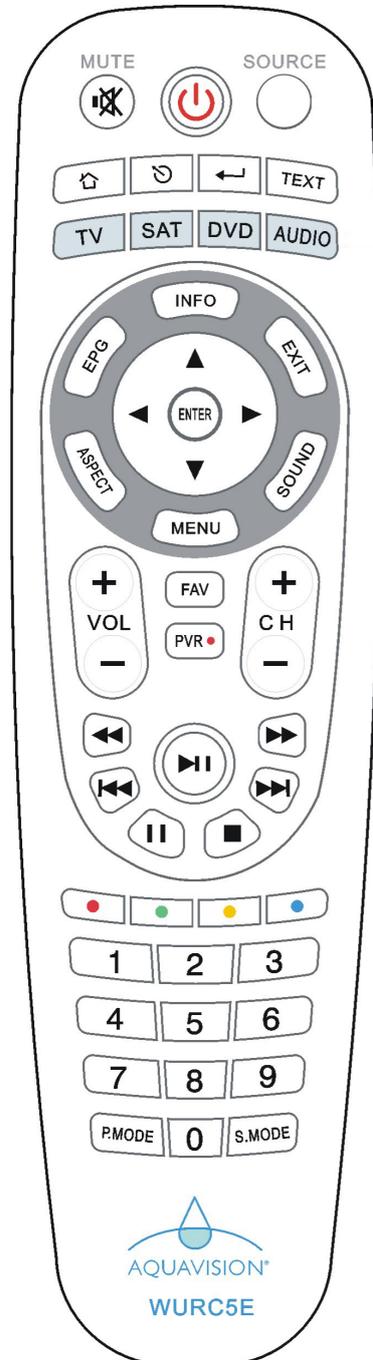

Television Model	Remote Code
Aquavision Series 4 and current models (Series 5)	0228
Aquavision Mark 3 (Sizes 26"-40")	0230
Aquavision Mark 1, Mark 2 and Mark 3 (Sizes 15"-23")	0229
Set Top Box - AMINO	2525/2524
Set Top Box - Exterity [RC2424533/01]	0234
Set Top Box - Guest Tek [LG3500/5000]	0233
Set Top Box - Quardiga Hotel TV	0232
Set Top Box - VDA Hotel TV	0231
Set Top Box - VDA PowerTV [SWP-3538WJ]	0235
SKY	2509
RESET to 'As Supplied'	977

To use your Aquavision Universal Remote Control with other appliances, please follow the instructions below:

Automatically search

- 1) Turn on the appliance and point the remote control at it. Press and hold [TV OR SAT/DVD/AUDIO] key for about 7 seconds, the LED will light up. Release the button and the remote will start to search the code automatically.
- 2) When the appliance is powered off, please press the [OK] key to save the codes and exit the search mode.

Manual Search

- 1) Turn on the TV and press and hold the [TV OR SAT/DVD/AUDIO] key, then long press [CH+] for about 5 seconds, the TV LED will be lit. Release the keys.
- 2) Press the key [CH+] OR [CH-], each time you press it, it will search once. When the channel changes, please press [OK] to save the code.
- 3) If you long press the key [CH+] / [CH-], it will search fast. When the channel changes, please release the key. Press [CH-] / [CH+] to adjust the code. If the channel changes again, please press [OK] to save the code.

NOTE: During setting process, if no key is pressed in 10 seconds the setting will be exited automatically.

Learning function

- 1) Press and hold the [TV OR SAT/DVD/AUDIO] key, then long press [VOL+] for about 5 seconds; the LED will be lit. Release the two keys. It is ready to learn.
- 2) Point the original remote control to WURC5A. The distance should be within 1-3 cm.
- 3) Press the function key of original remote control, the LED of WURC5A will keep flashing, then press any key of the Aquavision remote control to learn the code. The LED of WURC5A will stay on Please repeat Step 2 to continue learning other function keys.
- 4) After learning all the keys, please press and hold the [TV OR SAT/DVD/AUDIO] key, then press [VOL-], the LED will be extinguished. The learning will be saved.

NOTE: During the learning process, if no key is pressed in 25 seconds the learning state will be exited without saving.

Code Inquiry [to know what codes the remote control is using]

- 1) Use TV as example, press and hold the device key [TV] firstly, then press and hold [POWER] key, after 3 seconds LED will light, release them.
- 2) Input 990 with number keys. LED will flash twice and be off.
- 3) Press 1/2/3/4. For example, pressing 1, LED will start to flash. The flashes times is the code's first number. If code number is 0 then the LED will not flash.

Restore to Factory Setting

- 1) Press and hold the key [TV] firstly, then add a long press [POWER] key about 3 seconds (so both keys are being held down simultaneously), LED will light. Release the keys.
- 2) Input 977 with number keys, the LED will flash 3 times. The factory setting is restored.

Volume Lock/Unlock

This function can work for TV/SAT/DVD device. We use TV/SAT device keys to set up. This helps you to copy one device volume control function to another device.

Volume Lock

- 1) For example, we copy TV volume control function to SAT.
- 2) Press and hold the device key [SAT] firstly, then press and hold the key [POWER] about 3 seconds; the LED is on. Release the keys.
- 3) Input 993 with number keys. LED will flash 2 times.
- 4) Press device key [TV], LED will flash 2 times. Setting is saved and exited.
- 5) Now under SAT mode. The volume key function is same as TV mode. The SAT volume cannot be controlled.

NOTE: During the set-up process, if no key is pressed in 10 seconds or other keys are press, setting will be exited without saving.

Volume Unlock

- 1) It is used to unlock all volume lock setting.
- 2) Press and hold the device key [SAT] firstly, then press and hold the key [POWER] about 3 seconds; the LED is on. Release the keys.
- 3) Input 993 with number keys. LED will flash 2 times.
- 4) Press VOL+ once, LED will blink four times. Setting is saved and exit.



HEAD OFFICE AND FACTORY
Aquavision
Grosvenor Business Park, Horsfield Way,
Stockport, Cheshire, SK6 2SU
United Kingdom

 www.aquavision.tv

 sales@aquavision.tv

 +44 [0]161 711 1900

