

Frameless Fixing Kit Installation Guide

Installing your Aquavision Fixing Kit

Aquavision recommends that all installations are to be carried out by a qualified installer. Please ensure that the latest wiring and safety regulations are adhered to.

Firstly, use the table below to determine the cutout size depending on the size of your Aquavision Television*:


	16"	22"	27"/28"	32"	43"	55"	65"	85"	100"
Overall Size (mm)	495x350	554x391	702x472	833x550	1028x671	1336x815	1590×970	2000x1225	-
Cut Out Size (mm)	451 x 322	521 x 353	660 x 440	791 x 518	986 x 639	1252 x 766	1542 x 937	1940 x 1169	-
Cut Out Depth (mm)	50	50	50	60	60	60	100	100	-

*All dimensions have a tolerance of ±1-2mm

- 2. Once the position has been defined and the hole has been cut to the specifications above, sink the Fixing Kit into the wall to make sure that it fits. Then remove and set aside until the finish has been applied to the walls eg tiling.
- Run all of the required cables to the TV location including the Power Supply and Speakers if using. Ensure that all the cables are easily accessible and cannot fall back into the wall cavity.
- When installing the Fixing Kit into the wall, apply a bead of silicone all around the back flanges that sit in front of the wall. Carefully sink the Fixing Kit into the wall cutout ensuring the silicone gives a good waterproof seal against the wall then screw the Fixing Kit securely to the walls using the holes at each side.

NOTE - Be careful not to distort the box when tightening the fixings. You must take care not to bend or damage the sides or outer flanges of the box as this could potentially hinder any waterproofing qualities and therefore void the warranty.

Your Fixing Kit is now in position and is ready to accommodate the LCD and Glass. Instructions on fitting these components are supplied with each item respectively.

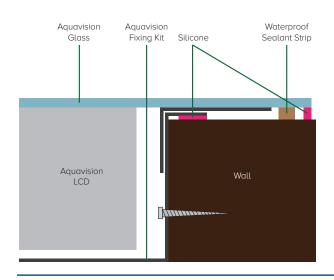

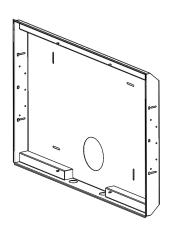


Image is for illustration purposes only



www.aquavision.tv





