
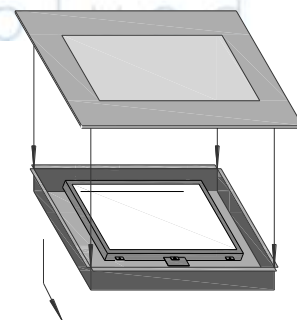


# Frameless Glass Installation Guide

1. Once the main body of your AQUAVISION® has been installed, the glass cover needs to be fitted. The first and most important job is to remove the protective film covering the LCD, clean the front of the screen and clean the back of the glass thoroughly. You will also need to ensure that the metal surround is clean and free from any plaster, grout, building residue, etc. as this will affect the AQUAVISION®'s waterproofing properties.
2. When cleaning the AQUAVISION® never use an abrasive cleaner. The front of the screen has a plastic finish and therefore should be cleaned with a soft, damp cloth and a mild, non-abrasive glass cleaning agent.
3. Holding the edges of the glass, line up the glass brackets with the metal hooks/tabs located on the inside edge of the fixing kit. Once aligned the glass should slide backwards by 5mm, you may need to push quite hard to compress the foam on the rear of the glass. Next, slide the glass down roughly 10mm. You will feel it lock into place if the above has been done correctly.
4. If you have trouble with step 3 check the following:
  - Ensure you have not over tightened the screws used to secure the fixing kit. If so it can cause the box to warp, this will prevent the brackets on the glass and hooks on the fixing kit lining up.
  - Check the cut-out for the fixing kit is not too big. If this is the case the fixing screws will pull the fixing kit frame sideways affecting the bracket and hook alignment. You may need to pack the hole out to prevent this.
  - If you are confident the fixing kit isn't warped, you may need to slightly bend the hooks on the inside of the fixing kit toward the middle of the box by 1mm using pin nosed pliers.
5. Check for any dirty marks, etc. and, if necessary, remove the front and re-clean.
6. Power up your Aquavision TV and ensure the viewing window of the LCD matches that of the glass viewing window. The TV may need to be moved up or down slightly to ensure the IR Board LED and LCD sit centrally within their retrospective viewing windows. If it needs adjustment remove the glass and adjust accordingly. Once you are happy with the LCD positioning re-fit the glass.
7. Once you are happy that the TV is working correctly and all of your selected inputs are working you **MUST SILICONE** the glass into place. Apply a generous bead of good quality clear silicone all the way around the glass ensuring there are no gaps or bubbles. Wipe away any excess silicone.

**Failure to silicone the glass will mean your TV IS NOT WATERPROOFED. Any TV that is water damaged due to incorrect installation will not be covered under warranty.**

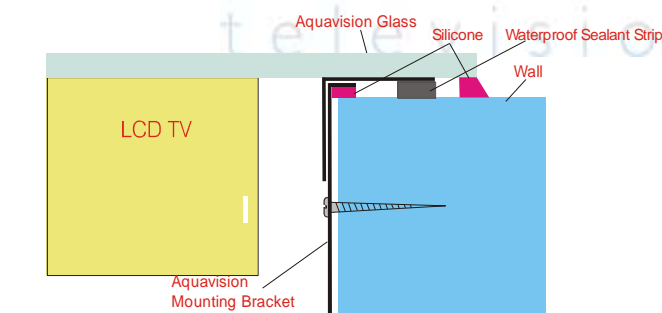

8. When you are completely happy that you have a waterproof seal, leave 48 hours for the silicone to dry before use. You should regularly check the soundness of this joint and rectify as necessary. It is the responsibility of the installer/customer to make sure that the AQUAVISION® unit is installed and sealed correctly; your guarantee will be void if any problems are caused through installation faults or poor sealing.
9. After any maintenance, you will need to completely clean the old silicone off and re-seal as stated above.



**HEAD OFFICE AND FACTORY**  
 Aquavision  
 Unit 2 Grosvenor Business Park,  
 Horsfield Way, Stockport,  
 Cheshire, SK6 2SU,  
 United Kingdom  
 +44 [0]161 711 1900

**AMERICAN OFFICE**  
 Aquavision, Inc.  
 #197  
 5 Southside Drive, Suite 11  
 Clifton Park, NY 12065  
 America  
 +1 800 524 1804



sales@aquavision.tv  
 sales@aquavision.us

www.aquavision.tv  
 www.aquavision.us