

# Classic Bezel Installation Guide

## Installing your Aquavision Bezel

Aquavision recommends that all installations to be carried out by a qualified installer. Please ensure that the latest wiring and safety regulations are adhered to.

1. Firstly, use the table below to determine the cutout size depending on the size of your Aquavision Television\*:

	16"	22"	27"/28"	32"	43"
Overall Size (mm)	516 x 371	576 x 413	724 x 494	854 x 571	1049 x 692
Cut Out Size (mm)	504 x 359	568 x 403	712 x 482	842 x 559	1038 x 680
Cut Out Depth (mm)	50	50	50	60	60

\*All dimensions have a tolerance of ±1-2mm

2. Once the position has been defined and the hole has been cut to the specifications above, ensure that the wall is finished. The tiles must run right up to the edge of the frame. It is not recommended to use raised edge tiles under the Bezel frame as this may effect waterproofing.
  3. Fit the two mounting brackets (supplied) to the Bezel frame using the screws provided
  4. Run all of the required cables to the TV location including the Power Supply and Speakers if included. Ensure that all the cables are easily accessible and cannot fall back into the wall cavity.
  5. When installing the Bezel into the wall, apply a bead of silicone all around the rear lip [polished edge]. This creates a waterproof seal between the mounting surface and Bezel. Carefully sink the Bezel into the wall cutout ensuring the silicone gives a good waterproof seal against the wall then screw it securely to the walls using the holes at each side.
- NOTE - Be careful not to distort the box when tightening the fixings. You must take care not to bend or damage the sides or outer flanges of the box as this could potentially hinder any waterproofing qualities and therefore void the warranty.**
6. Your Fixing Kit is now in position and is ready to accomodate the LCD and Glass. Instructions on fitting these components are supplied with each item respectively.


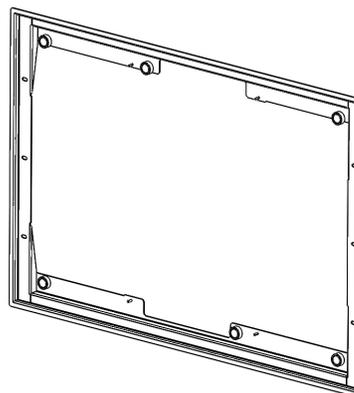


Image is for illustration purposes only

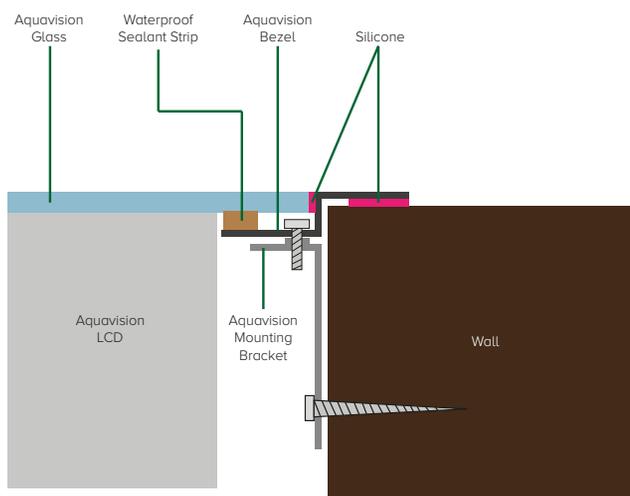